

PicoLAS

FOCUSSING POWER TO THE POINT

User Manual

Rev. 01.14

PLCS-40 BOB

PicoLAS GmbH

Company for Innovative Power Electronics and Laser Technology

Kaiserstrasse 100
52134 Herzogenrath

Distributor:



Schulz-Electronic GmbH
Dr.-Rudolf-Eberle-Straße 2
D-76534 Baden-Baden
Fon + 49.7223.9636.0
Fax + 49.7223.9636.90
vertrieb@schulz-electronic.de
www.schulz-electronic.de


Table of Contents

Table of Contents.....	2
PLCS-40 BOB.....	3
Connectors of the Break out Board (BOB)	4

PLCS-40 BOB

The PLCS-40 Bob is designed to provide an easy way operating the PLCS-40. It is equipped with 15V voltage regulator, which enhances the operating voltage to 24 V ... 30 V. An additional voltage regulator provides 5 V / 1 A to an external connector. This can be used to power additional devices like the BFS-VRM 03.


Furthermore two connectors provide easy access to the RS-232 connectors of the PLCS-40. Please note that the SUB-D and PLB-21 connectors cannot be used at the same time.

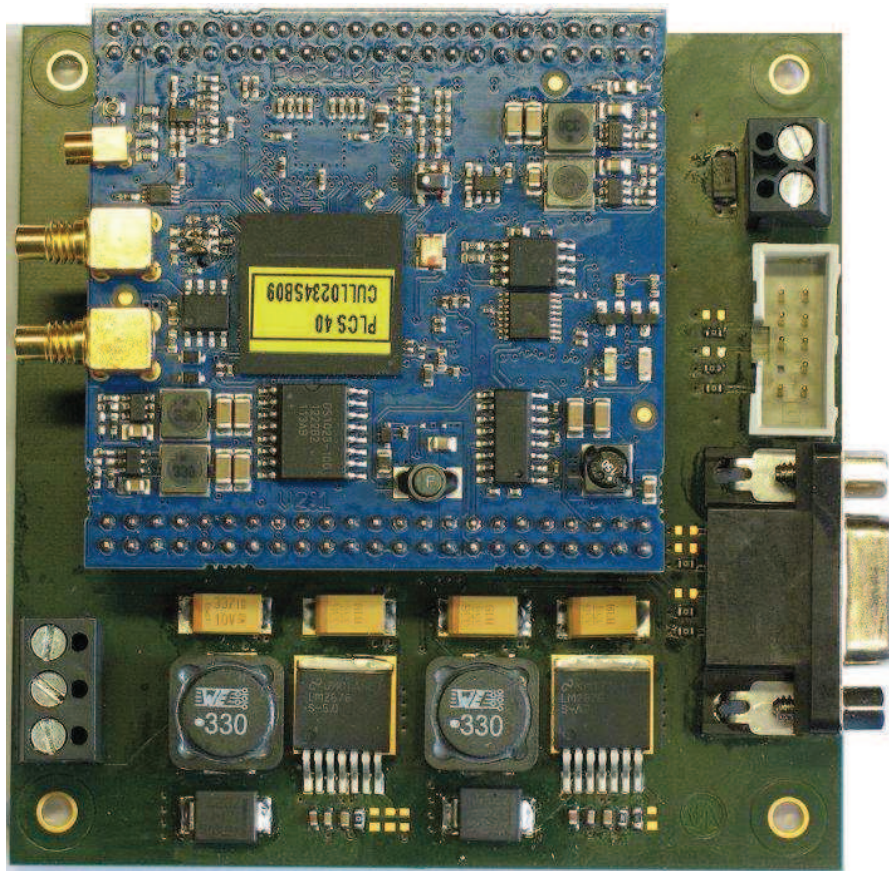

PLCS-40 BOB with attached PLCS-40

Connectors of the Break out Board (BOB)


The following picture shows the position and polarity of the connectors. The individual pin out is described afterwards.

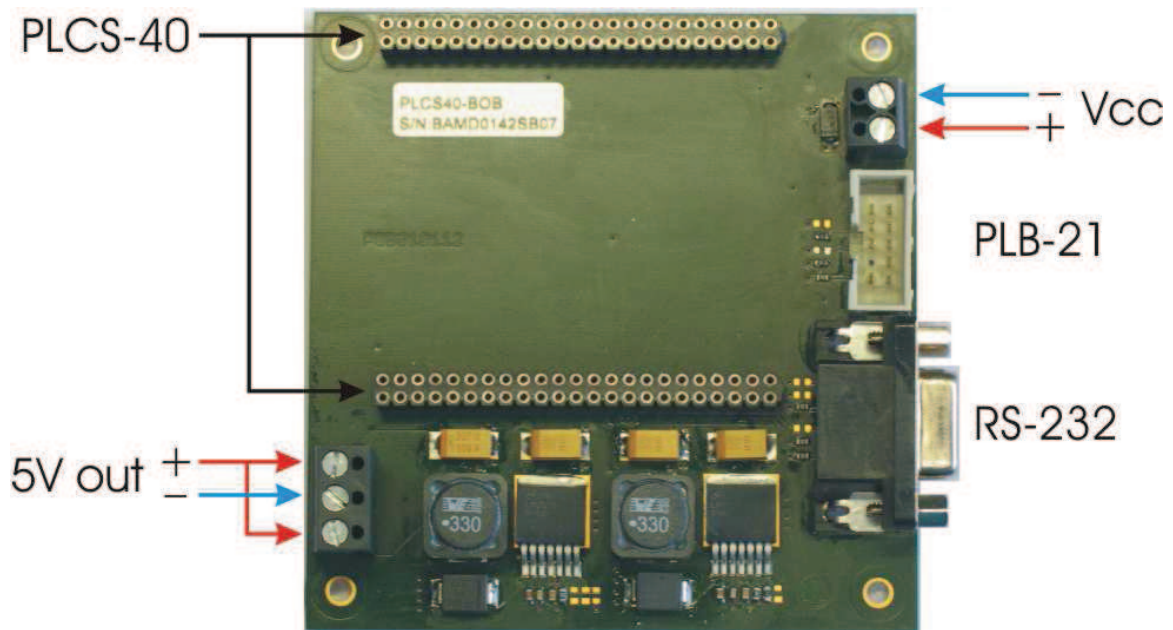

PLCS-40 BOB without attached PLCS-40

PLB-21


This connector is used to connect the PLCS-40 BOB to a PLB-21. This connection can not be used in combination with the RS-232 connector as they share the same physical interface on the PLCS-40. The following picture shows the pin out:

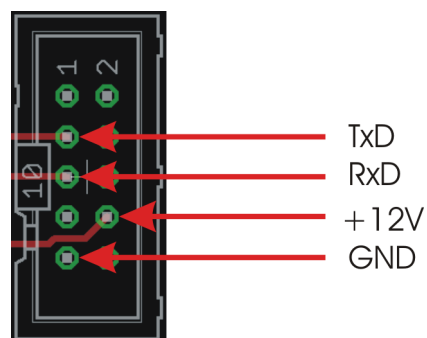

PLB-21 connector

RS 232

This connector can be used to connect the PLCS-40 BOB to a PC using a RS232 port or an USB-serial converter. Please use a 1:1 RS232 cable. This connection can not be used in combination with the RS-232 connector as they share the same physical interface on the PLCS-40.

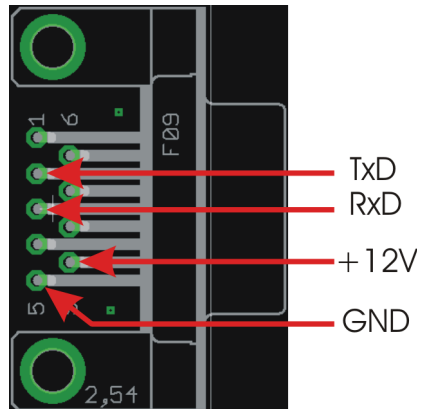

RS 232 connector